

Save Database File to USB Memory Stick


HERAEUS IM2 / SENSORLAB STEEL

Prerequisites

- The following items are required::
 - A **USB memory stick** inserted into one of the SensorLab USB ports to save the database zip file.
 - A **mouse and keyboard** connected to the SensorLab


Log In

- From the Home screen, select **Login**
- Enter password: **24816**

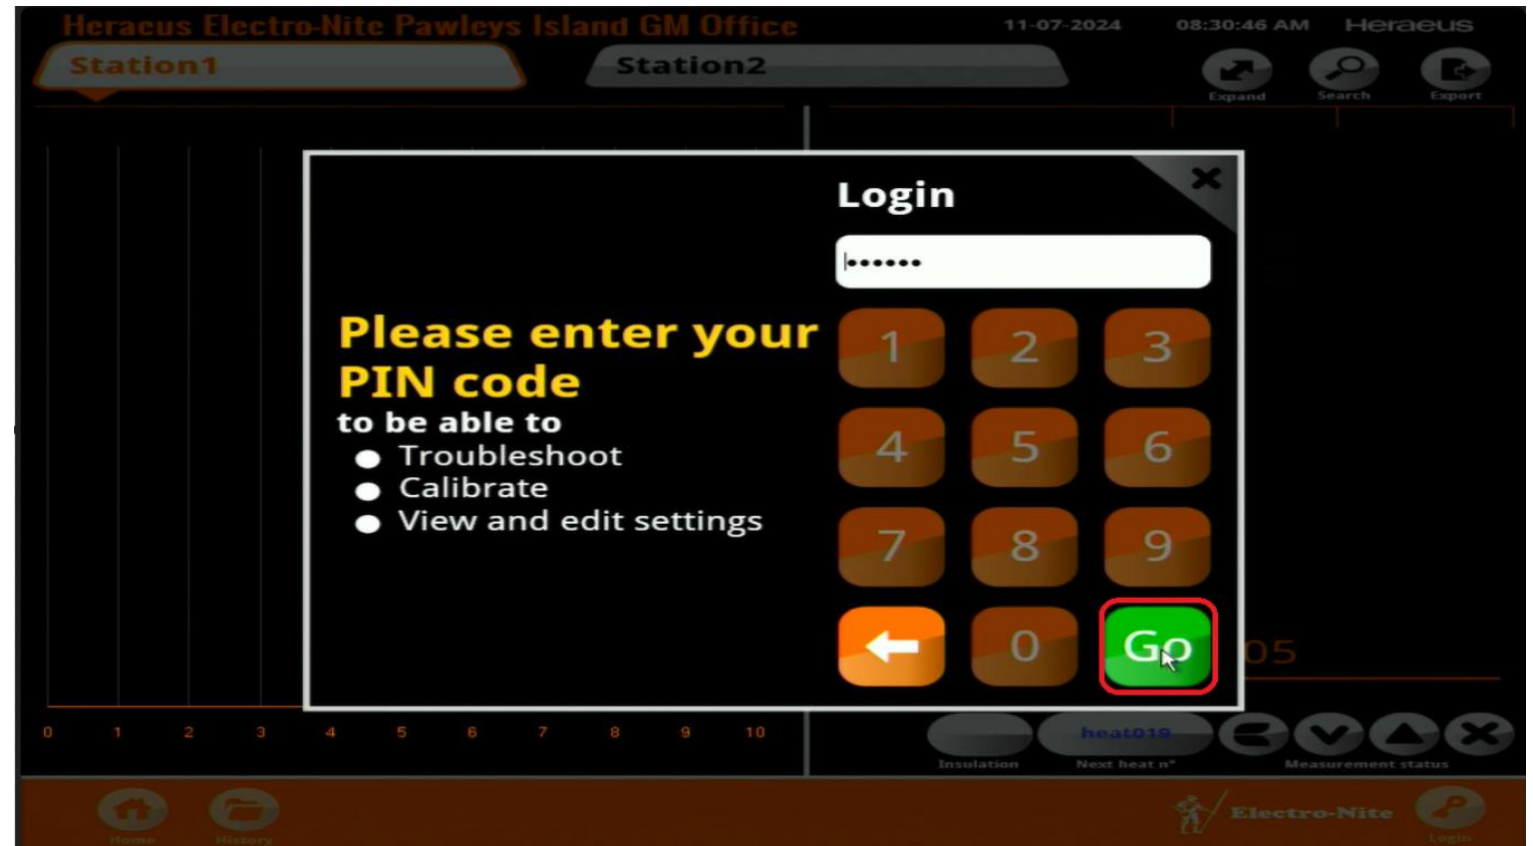


Open System Tools

- Select **System Tools**
- Then click the **Save Database** button

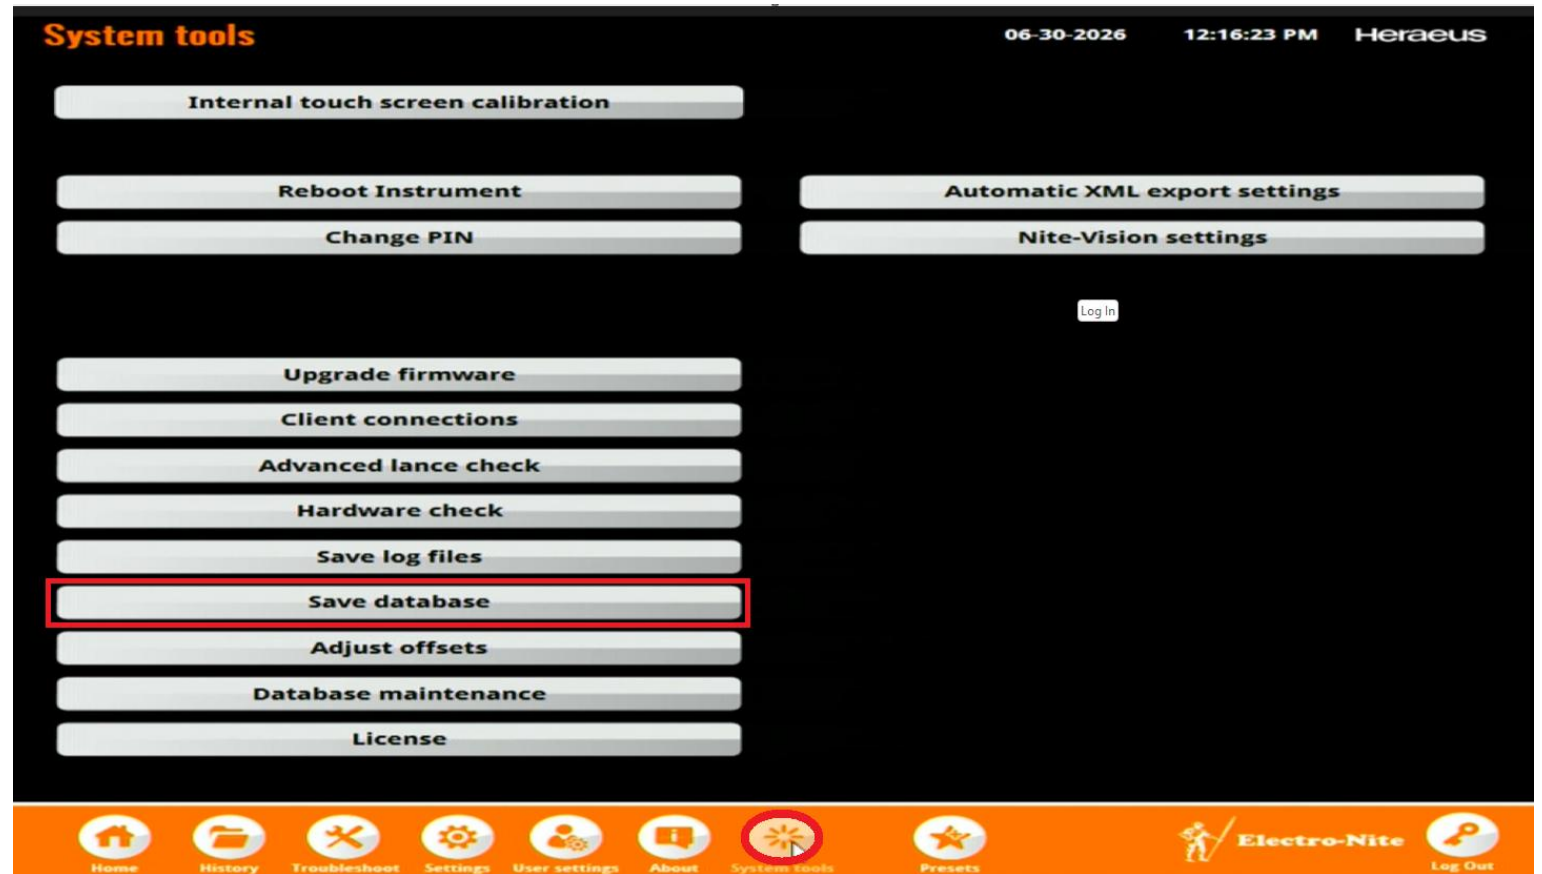

Export Database File

- Choose the desired USB drive location
- Rename the file if required
- Select **Save**

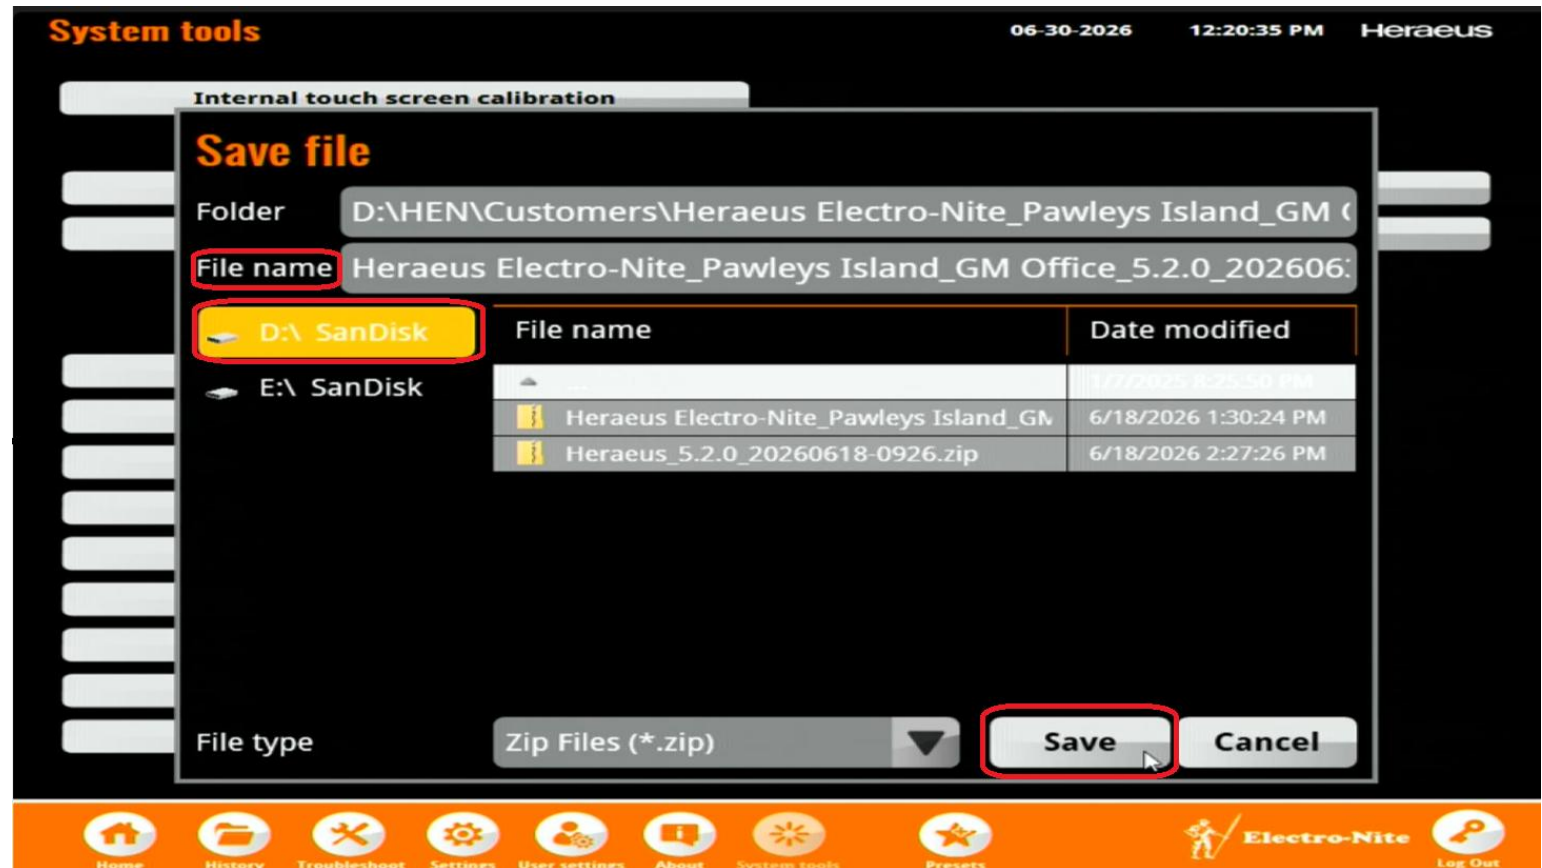

Confirm Save

- Verify the confirmation message indicating the file was saved successfully
- Select **OK** to return to normal operation

